NSTALLATION GUIDE

Part#: 013431, 013615

HARDCORE LIMITED LIFETIME WARRANTY

4" & 6" Radius Arm Suspension System

Ford F250/350 4WD 2005-2007

Rev. 120419

491 W. Garfield Ave., Coldwater, MI 49036 • Phone: 517-279-2135 Web: www.bds-suspension.com • E-mail: tech-bds@ridefox.com



Your truck is about to be fitted with the best suspension system on the market today. That means you will be driving the baddest looking truck in the neighborhood, and you'll have the warranty to ensure that it stays that way for years to come. Thank you for choosing BDS Suspension!

BEFORE YOU START

BDS Suspension Co. recommends this system be installed by a professional technician. In addition to these instructions, professional knowledge of disassembly/ reassembly procedures and post installation checks must be known.

FOR YOUR SAFETY

Certain BDS Suspension products are intended to improve off-road performance. Modifying your vehicle for off-road use may result in the vehicle handling differently than a factory equipped vehicle. Extreme care must be used to prevent loss of control or vehicle rollover. Failure to drive your modified vehicle safely may result in serious injury or death. BDS Suspension Co. does not recommend the combined use of suspension lifts, body lifts, or other lifting devices. You should never operate your modified vehicle under the influence of alcohol or drugs. Always drive your modified vehicle at reduced speeds to ensure your ability to control your vehicle under all driving conditions. Always wear your seat belt.

BEFORE INSTALLATION

- Special literature required: OE Service Manual for model/year of vehicle. Refer to manual for proper disassembly/reassembly procedures of OE and related components.
- Adhere to recommendations when replacement fasteners, retainers and keepers are called out in the OE manual.
- Larger rim and tire combinations may increase leverage on suspension, steering, and related components. When selecting combinations larger than OE, consider the additional stress you could be inducing on the OE and related components.
- Post suspension system vehicles may experience drive line vibrations. Angles may require tuning, slider on shaft may require replacement, shafts may need to be lengthened or trued, and U-joints may need to be replaced.
- Secure and properly block vehicle prior to installation of BDS Suspension components. Always wear safety glasses when using power tools.
- If installation is to be performed without a hoist, BDS Suspension Co. recommends rear alterations first.
- Due to payload options and initial ride height variances, the amount of lift is a base figure. Final ride height dimensions may vary in accordance to original vehicle attitude. Always measure the attitude prior to beginning installation.



Visit 560plus.com for more information.

TIRES AND WHEELS

4″ Kit

35" x 12.50" w/17 x 9 and 4.5" back spacing 35" x 12.50" w/18 x 9 and 4.5" back spacing 35" x 12.50" w/20 x 9 and 4.5" back spacing **6" Kit**



37" x 12.50" w/17 x 9 and 4.5" back spacing 37" x 12.50" w/18 x 9 and 4.5" back spacing 37" x 12.50" w/20 x 9 and 4.5" back spacing ***Trimming may be required***

BEFORE YOU DRIVE

Check all fasteners for proper torque. Check to ensure for adequate clearance between all rotating, mobile, fixed, and heated members. Verify clearance between exhaust and brake lines, fuel lines, fuel tank, floor boards and wiring harness. Check steering gear for clearance. Test and inspect brake system.

Perform steering sweep to ensure front brake hoses have adequate slack and do not contact any rotating, mobile or heated members. Inspect rear brake hoses at full extension for adequate slack. Failure to perform hose check/ replacement may result in component failure. Longer replacement hoses, if needed can be purchased from a local parts supplier.

Perform head light check and adjustment.

Re-torque all fasteners after 500 miles. Always inspect fasteners and components during routine servicing.

CONTENTS OF YOUR KIT

013431 (4") / 013615 (6") Front Box Kit					
Part #	Qty	Description			
422 1		Bolt Pack			
	4	3/8"-16 x 1-1/4" bolt grade 8 yellow zinc			
	4	3/8"-16 prev. torque nut yellow zinc			
	8	3/8" USS flat washer yellow zinc			
431 1		Bolt Pack			
	2	5/16"-18 x 1-1/4" bolt grade 8 yellow zinc			
	2	5/16"-18 x 1" bolt grade 8 yellow zinc			
	4	5/16"-18 prevailing torque nut yellow zinc			
	8	5/16" SAE flat washer yellow zinc			
	2	5/16"-18 x 3/4" bolt grade 8 yellow zinc			
	6	1/4"-20 prevailing torque nut clear zinc			
	12	1/4" USS flat washer clear zinc			
	2	1/4"-20 x 3/4" bolt grade 5 clear zinc			
	4	1/4"-20 x 1" bolt grade 5 clear zinc			
	1	1/8" x 1" cotter pin clear zinc			
02022B	1	Track Bar Bracket			
02019	2	Cam Washer			
083404R	1	Pitman Arm			
01528	1	Stabilizer Bracket			
099000	2	ZipTie			
099002	4	Tree Zip Tie			
02025B	2	Sway Bar Drop Bracket			
01001	2	Bump Stop Spacer (013615 Only)			
01000B	2	Bump Stop Spacer (013431 Only)			
01655	2	Brake Line Bracket (013431 Only)			
02017	2	Brake Line Bracket (013615 Only)			

4" or 6" Leaf Spring					
Part #	Qty	Description			
BDS003609	2	Rear Leaf Spring			

UBT4033 Replacement Leaf Spring U-Bolts					
Part #	Qty	Description			
583581200RB	1	5/8" x 3-5/8" x 12" Round U-bolt			
N58FHB	2	5/8″ Fine High Nut			
W58SB	2	5/8" SAE Flat Washer			

TROUBLESHOOTING INFORMATION FOR YOUR VEHICLE

- 1. These trucks were manufactured with and without top mounted overload springs on the rear leaf springs. A top mounted overload is an extra leaf separate from the pack that set above the main leaf. You will need to identify which you have before ordering.
- 2. If your vehicle is equipped with a carrier bearing, you will need to order 123402 in the accessories section.
- 3. 3. 5" Block included to replace factory block

INSTALLATION INSTRUCTIONS

PC

FRONT DISASSEMBLY

- 1. Park the vehicle on a clean, flat surface and block the rear wheels for safety.
- 2. Disconnect the front track bar from the frame mount. Retain hardware.
- 3. Raise the front of the vehicle and support under the frame rails with jack stands.

Note: As a result of the location of the long radius arm suspension, support locations are limited. Use your best judgment while supporting the vehicle with sufficient strength stands at appropriate locations. The radius arms will need to move freely during this installation.

- 4. Remove the front wheels.
- 5. Support the front axle with a hydraulic jack.
- 6. Disconnect the front brake lines from the axle and frame (Fig 1). Retain hardware.



7. Free the hub vacuum lines from the axle (Fig 2, 3).

FIGURE 1

FIGURE 3





- 8. Disconnect the sway bar end links from the axle mounts. Retain hardware.
- 9. Remove the OE shock. Retain lower mounting hardware.
- 10. Remove the ABS line from the retaining tab on the radius arm (Fig 4). Carefully pull the plastic retaining clip free from the radius arm (Fig 5).





11. Disconnect the OE steering stabilizer from the drag link and the frame mount. Remove the two nuts (and bolt tab) mounting the stabilizer frame mount and remove it from the vehicle. Retain the frame bracket mounting hardware.

FRONT INSTALLATION

12. Install the new steering stabilizer bracket to the frame using the original hardware (Fig 6). Mount the stabilizer bracket to the back side of the frame crossmember in the original mounting holes. Torque hardware to 55 ft-lbs.

FIGURE 4



- 13. Install the provided shock stud in the new stabilizer bracket up through the bracket so that the stud points down (Fig 6). Torque to 50 ft-lbs.
- 14. Disconnect the (5) bolts mounting the OE track bar bracket to the frame. Remove bracket and retain hardware.
- 15. Disconnect the drag link from the pitman arm. Retain hardware. Free the drag link from the pitman arm with a pickle fork.
- 16. Remove the pitman arm nut. Note the indexing of the pitman arm in relation to the steering sector shaft and remove the pitman arm from the steering box using the appropriate puller.
- 17. Remove all of the dri-lock compound on the threads of the OE nut and steering sector shafts. This is important to ensure that the new thread lock compound will adhere properly.
- 18. Apply a bead of the supplied thread lock all the way around the threads of the OE nut.
- 19. Install the new pitman arm (indexed the same as the OE) and fasten with the OE nut. Torque the nut to 350 ft-lbs.
- 20. Lower the axle until the OE coil springs are free and remove the springs from the vehicle. Retain the upper spring isolator for use with the new springs.

Note: Do not over extend the brake lines.

21. Install the new track bar bracket using the stock mounting hardware as it was removed (Fig 7). Torque all (5) mounting bolts to 129 ft-lbs.



FIGURE 7 (FROM REAR)



22. Pull the OE front bump stops free from the bump stop cups and remove the bolt mounting the cup to the frame (Fig 8).



- 23. Install the cup on the provided bump stop extension with a 5/16" x 1" bolt, nut and 5/16" SAE washers from bolt pack #431. The alignment tab on the bump stop cup will fit in the second hole in the extension. Torque hardware to 20 ft-lbs.
- 24. Install the extended bump stop to the frame with the original hardware and torque to 20 ft-lbs (Fig 9). The closed face of the extension should face the outside of the vehicle. Install the original bump stop in the relocated bump stop cup.



FIGURE 9

RADIUS ARM INSTALLATION

- 25. Loosen the four radius arm-to-axle mounting bolts but do not remove. Once again, ensure that the front axle is well supported.
- 26. Starting with the passenger's side, remove the upper radius arm-to-axle mounting bolt. Remove the radius arm-to-frame bolt as well. This will allow the radius arm to swing down away from the frame.
- 27. Remove the stock radius arm and replace with the new one. Install cams into the lower slots with new 18mm hardware, and use one of the old lower 18mm nuts on the driver's side upper mount at the axle with factory hardware. Note: The upper bolt at the axle can be removed with the stock shock in place, however, certain aftermaker shocks may need to be disconnected to allow removal of the upper bolt. (Fig 3)

Note: 4" and 6" kits, offset the cam forward as shown in Figure 11.



- 28. Tighten the front hardware at the axle to 222 ft-lbs. Do not tighten the frame pivot hardware at this time.
- 29. The badge can now be riveted on to the outside faces of the radius arms using the provided 1/8" rivets. Any residue on the badge can be cleaned up using alcohol or brake cleaner before install. With the badge not installed it can be painted to what ever color you desire, or left raw as a stainless steel badge.
- 30. Repeat this procedure on the driver's side of the vehicle.

FRONT INSTALLATION - CONTINUED

- 31. Install the new coil springs in conjunction with the OE top isolator. Rotate the springs so that they seat in the bottom coil perch properly.
- 32. Install the new shocks using the original lower mounting hardware and the provided upper mounting hardware. Torque the lower bolt to 100 ft-lbs and the upper until the bushings begin to swell.
- 33. Note the orientation of the front sway bar (top verses bottom). Disconnect the sway bar from the frame and remove from the vehicle. Retain hardware.
- 34. Install the provided sway bar drop bracket to the original sway bar frame mounting locations with the original hardware. Torque hardware to 30 ft-lbs.

Note: The square alignment tabs mount down toward the sway bar.

35. Attach the sway bar to the new drop brackets in the correct orientation with the 3/8" hardware from bolt pack #422. Torque hardware to 30 ft-lbs (Fig 11).



FIGURE 11

- 36. Install the sway bar link ends in the original axle mounts and secure with the OE hardware.
- 37. Attach the ABS line to the radius arm using the tree style zip ties as well and standard zip ties as needed.
- 38. Zip tie the driver's side hub vacuum line to the ABS wire. Reconnect the passenger's side hub vacuum line to the original mounting hole.

4" BRAKE LINE DROP

- 39. Install the provided brake line relocation bracket to the original mounting hole on the coil spring bucket with the OE bolt. (Fig. 12)
- 40. Attach the brake line to the stud on the bracket and secure with a ¼" nut and ¼" USS washer from bolt pack #431. Torque OE bolt to 20 ftlbs and ¼" nut to 10 ft-lbs.

FIGURE 12 (4" ONLY)

FIGURE 13 (6" ONLY)





6" BRAKE LINE DROP

- 41. Attach the short end of the brake line bracket to the coil mount. (Fig 13) Align the two holes in the bracket with the existing coil mount holes. Install a 1/4" x 1" bolt, nut and 1/4" USS washers (Bolt Pack #431) in the top hole and the original bolt in the second hole down. Tighten hardware to 10 ft-lbs.
- 42. Carefully reform the hard brake line in order to mount it to the lower holes in the bracket. Attach with 1/4" x 1" bolt, nut and 1/4" USS washers (Bolt Pack #431). Tighten to 10 ft-lbs.
- 43. Reattach the hub vacuum lines to the original locations.

6" Notes: Reform the driver's side vacuum line retainer on the differential as necessary. Use the provided zip ties to reattach the passenger's side line as necessary.

- 44. Attach the drag link to the new pitman arm, fasten with the OE nut, and torque to 65 ft-lbs. Install the OE castellated nut cap and new cotter pin (BP #431).
- 45. Install the tapered steering stabilizer stud in the original tapered mounting hole in the drag link. Torque hardware to 55 ft-lbs.
- 46. Install the new steering stabilizer cylinder to the stud on the frame bracket the new stud in the drag link. Torque hardware to 45 ft-lbs.

BOTH 4" AND 6" KITS

- 47. Install the wheels and lower the vehicle to the ground.
- 48. Attach the track bar to the new bracket with the OE hardware. Turn the steering wheels to aid in aligning the track bar in the bracket. Torque hardware to 406 ft-lbs.

6" Only: Install the provided cam washers between the alignment tabs on the bracket so that the hole is closer to the inside of the vehicle (Fig. 14)

4" Only: Install the provided cam washers between the alignment tabs on the bracket so that the hole is closer to the outside of the vehicle.





REAR INSTALLATION

50. Raise the rear of the vehicle and support with jack stands under the frame rails just ahead of the spring hangers.

- 51. Remove the wheels.
- 52. Support the axle with a hydraulic jack.
- 53. Remove the OE shocks. Retain all mounting hardware.

BLOCK KIT ONLY (4" ONLY)

- 54. Disconnect the passenger's side spring u-bolts.
- 55. Lower the axle enough to place the provided 3" lift block between the axle and OE block.
- 56. Ensure that the mounting surfaces are clean of dirt and corrosion and install the new block so that the short end is toward the front. Also make certain that the OE block is on top of the new block and that the bump stop wing is pointing inward.
- 57. Raise the axle to engage all of the block/spring alignment pins. Fasten the entire assembly with the provided u-bolts, high nuts and washers. Snug but do not torque the u-bolts at this time.
- 58. Repeat block installation of the driver's side. Take care not to over extend the brake lines.

Note: You may disconnect the parking brake mounting tab on the spring plate before removing the u-bolts and reattach after the installation is complete.

LEAF SPRING KIT ONLY

- Disconnect the passenger's side u-bolts and lower the axle from the spring.
 4" Kit: Remove the OE block, it will not be reused.
 6" Kit: Retain OE block to be installed with new spring.
- 60. Loosen and remove the front spring-to-frame and rear shackle-to-frame bolts and remove the spring from the vehicle.
- 61. Remove the shackle from the OE spring and loosely install it on the new rear spring. Be sure that the shackle is oriented on the new spring identical to the old. The shackles mount of the longer end of the spring (opposite of the end marked with "FRT").
- 62. Install the new spring in the vehicle with the OE bolts. Leave hardware loose. All of the spring pivot bolts will be torqued with the weight of the vehicle on the springs.
- 63. Remove all dirt and corrosion from the axle spring pad and raise the axle to the spring while aligning the center pin with the center pin hole. Fasten the spring with the provided u-bolts. Snug but do not torque u-bolts at this time.
- 64. Repeat the procedure on the driver's side. Disconnect the parking brake cable bracket from the spring plate and retain hardware (Fig 15). Take care not to over extend the brake lines.
- 65. Reattach parking brake cable bracket to the spring plate. If more slack is needed remove the cable from the rear-most cable ring on the frame rail (Fig 16).

FIGURE 15



FIGURE 16



BLOCK AND LEAF SPRINGS KITS

66. Install the new shocks with the original mounting hardware.

Note: With the shocks installed, allow the axle to hang at full droop. Check shock to shock mount u-bolt clearance. In some cases, the shock may contact the u-bolt. If this is the case, loosen the u-bolt and rotate the mount up, moving the shock away from the axle tube. Retighten the u-bolts to 90 ft-lbs. The bracket can also be tack welded in place to prevent any movement, but is not necessary.

- 67. Install wheels and lower the vehicle to the ground.
- 68. With the weight of the vehicle on the axle, torque the u-bolts to 130-150 ft-lbs.
- 69. Check all hardware for proper torque.
- 70. Adjust steering wheel.
- 71. Adjust headlights
- 72. Check hardware after 500 miles.



WE WANT TO SEE YOUR RIDE!

Grab photos of your BDS-equipped truck in action and send them in for a chance to be featured. Send it in to our Bad Ass Rides customer gallery at bds-suspension.com/bar and post them on the BDS Fan Page on Facebook at facebook.com/BDSSuspensions. Don't forget about your BDS swag! BDS offers t-shirts, hoodies, decals and more available on the BDS website or through your local BDS distributor.

TIME TO HAVE SOME FUN

Thank you for choosing BDS Suspension.

For questions, technical support and warranty issues relating to this BDS Suspension product, please contact your distributor/installer before contacting BDS Suspension directly.